



**Active
Furniture**

ROVER RANGE

INSTRUCTION OF USE

To adjust back height hold back with two hands while seated and raise to desired height

To lower the back height raise back all the way to the top and release slowly

RIGHT FOURTH LEVER
To adjust back angle


RIGHT THIRD LEVER
To adjust seat angle

RIGHT SECOND LEVER
To adjust seat height

RIGHT FRONT LEVER
To adjust seat front angle

**700MM BLACK NYLON
5 STAR BASE WITH CASTORS**

Use soft tyred castors for tiles
Use hard tyred castors for carpet

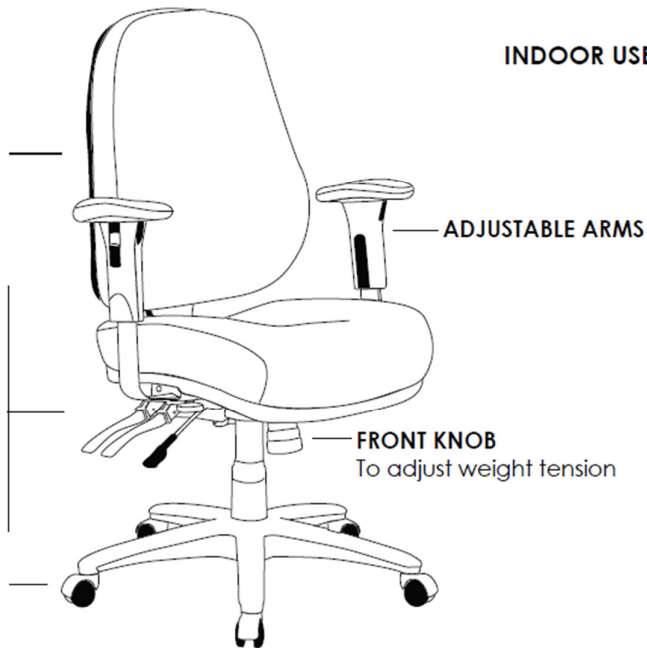

INDOOR USE ONLY

ADJUSTABLE ARMS

FRONT KNOB
To adjust weight tension

X Do not use as a step ladder

DIMENSIONS: (mm)

BACK	BACK TO FLOOR	SEAT	SEAT TO FLOOR	ARM TO FLOOR
W: 500 H: 630	Lowest: 1095 Highest: 1260	W: 510 D: 520	Lowest: 480 Highest: 570	Lowest: 640 Highest: 790



Side view



Back view

Features:

Adjustable seat height
Adjustable back height (ratchet)
Adjustable seat and back angle
Adjustable weight tension

Adjustable arms
Moulded seat and back foam
4 lever ergonomic mechanism

700mm black nylon 5 star base
Available in black leather only
Suitable for indoor use only

